



# PR3-A11 – Installation Procedure

*NOTE: The Device must be turned off to flash the new firmware.*


- 1. Install the 64install.exe driver from the SPRD\_NPI\_USBDriver\_1.4 folder.
- 2. Open the ResearchDownload.exe

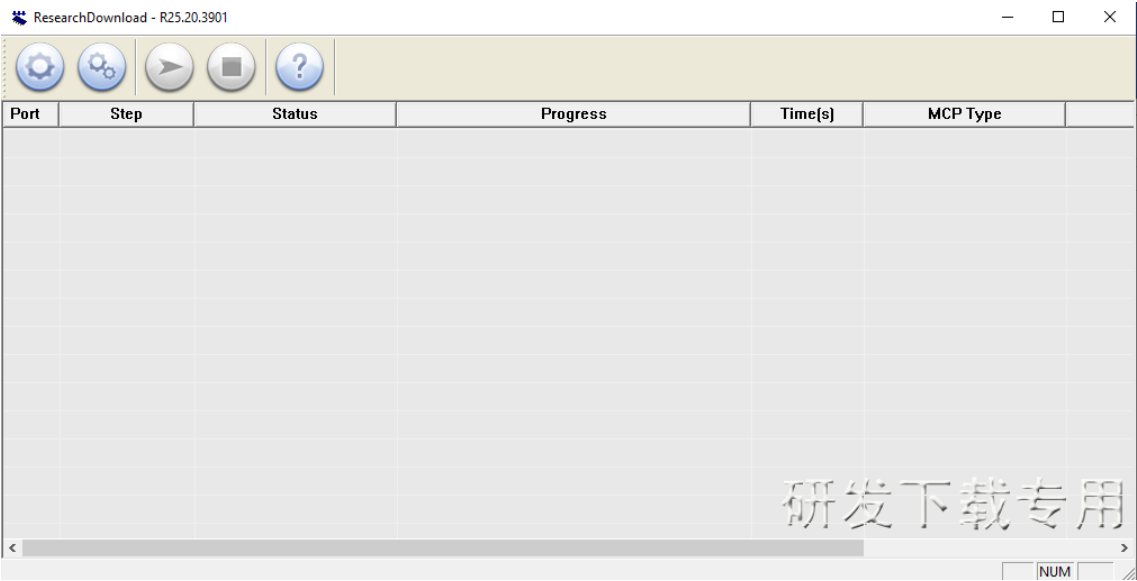


- 3. Load Packet

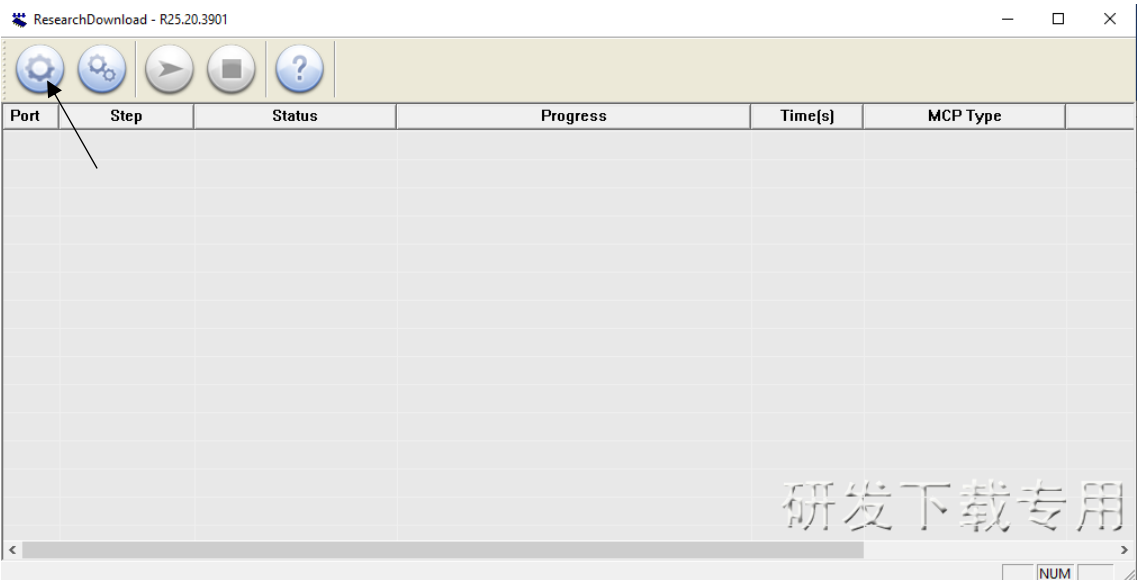

4. Select the 5803\_\_AiPuDa\_s9863a1h10\_\_s8668a\_3g\_T8086\_20240109\_003.pac file and press “open”

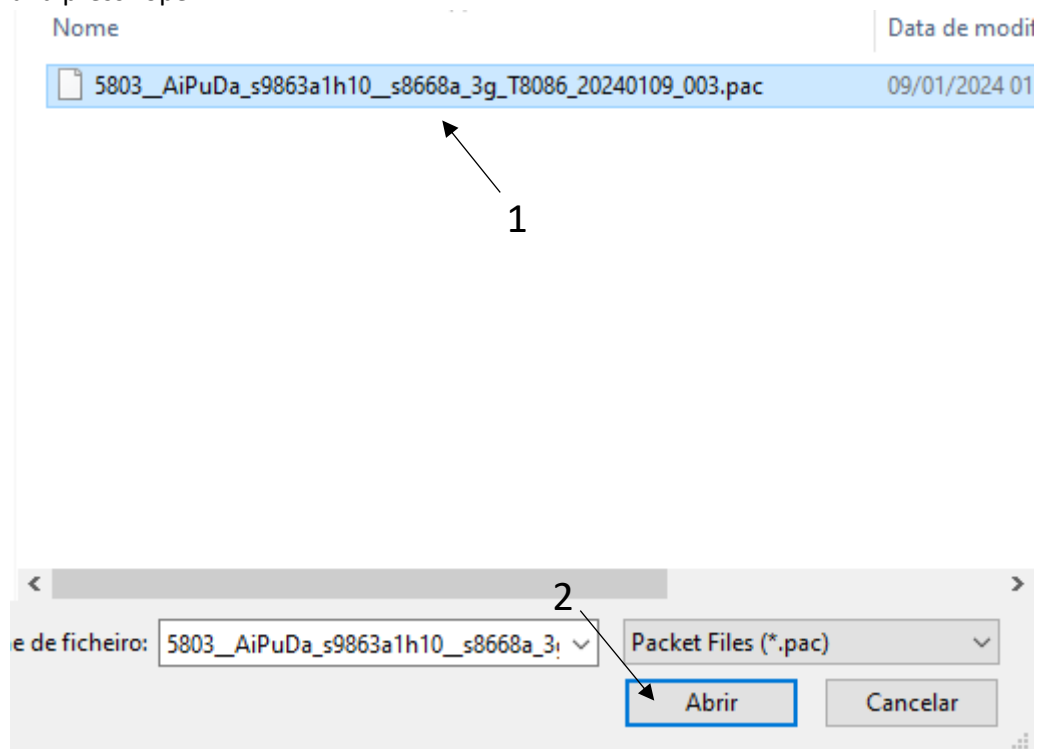

5. Start Download

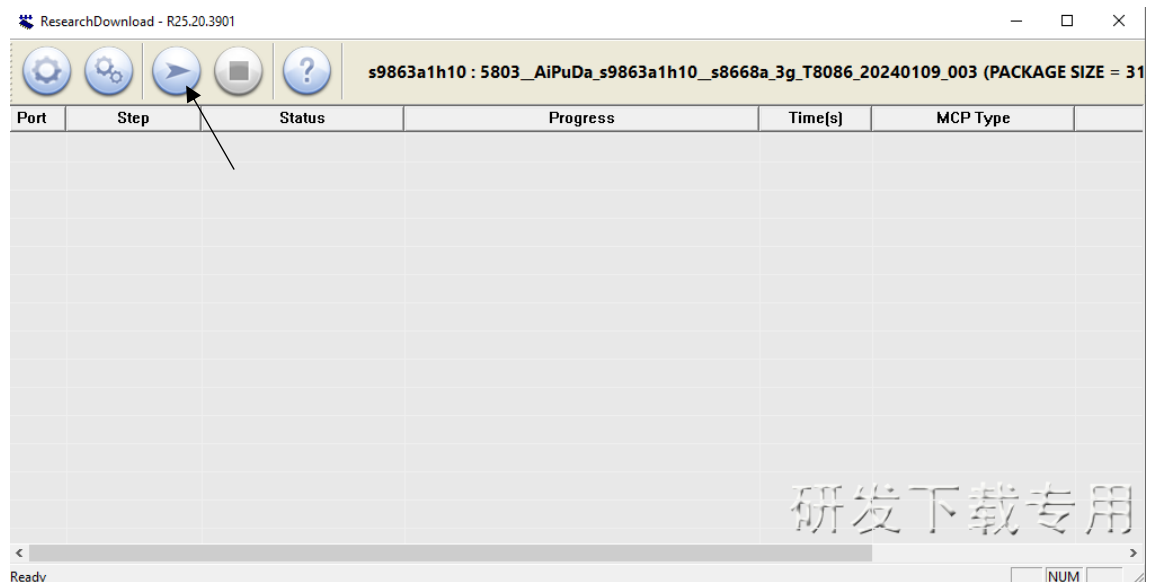

6. With the device turned off, press the button “Volume down” and connect the device to the computer. Download should start automatically.
- The process should take around 200 seconds. Do not remove the device while it's being flashed with the new firmware.

7. When the download is finished and successful, the progress bar will change to “Passed”

ResearchDownload - R25.20.3901

s9863a1h10 : 5803\_AiPuDa\_s9863a1h10\_s8668a\_3g\_T8086\_20240109\_003 (PACKAGE SIZE = 31

Port	Step	Status	Progress	Time[s]	MCP Type	
5	_POWEROFF_	Finish	Passed	196s	—	3572

研发下载专用

Ready NUM